

| Toner kodu | yazıcılar |
|-------------------------|--|
| CB435A/CRG-312/712 | HP LJ P1006/P1005; Canon LBP-3018/3010/3100/3150 |
| CB436A/CRG-313/713 | HP LJ P1505/M1522n/M1120/M1120n; Canon LBP-3250 ; canon 713 |
| CB435A | HP LJ P1006/P1005; |
| CB436A | HP LJ P1505/M1522n/M1120/M1120n |
| CB435A | HP LJ P1006/P1005; |
| CB436A | HP LJ P1505/M1522n/M1120/M1120n |
| CE285A | HP LJ P1100/1102; M1130/M1132/M1210/1212nf/1214nfh/1217nfw |
| CC388A | HP LJ P1007/P1008; M1136/1213nf/1216nfh |
| CE278A/CRG-328/728 | HP LJ P1566/1600/1606/M1536; Canon MF4410/4412/4420/4550/4570/D520 |
| CE285A/CRG-325/725 | HP LJ P1100/1102; M1130/M1132/M1210/1212nf/1214nfh/1217nfw Canon LBP 6000/6018 |
| Q2612A/CRG303/CRG703 | HP LJ |
| Q2612X/CRG303/CRG703 II | 1010/1012/1015/1018/1020/1022/3010/3015/3020/3030/3050/ 3052/3055/M1005fp; Canon LBP2900/3000 canon 712 |
| CE505A/CRG 719 | HP LJ P2030/2035/2050/2055d/P2055dn; Canon LBP 6300/6650 |
| CE505X/CRG 719 H | HP LJ P2050/2055d/P2055dn; Canon LBP 6300/6650 |
| CF280A | HP LJ P400 |
| CF280X | M401/M401N/M401DN/M425/M425DN/M425DW/M425N MFP |
| Q5949A | HP LJ 1160/1320/1320N/3390/3392 |
| Q5949X | HP LJ 1320/1320N/3390/3392 |
| Q5949A/7553A | HP LJ 1160/1320/1320N/3390/3392;LJ 2014/2015/2015d/2015n/2015dn/M2727 |
| Q5949X/7553X | HP LJ 1320/1320N/3390/3392;LJ 2014/2015/2015d/2015n/2015dn/M2727 |
| CE255A | HP LJ P3010/P3015/P3015d/P3015dn/P3015x/P3016 |
| CE255X | |
| Q6511A | HP LJ 2400/2410/2410n//2420/2420n//2430/2430n; Canon |
| Q6511X | LBP 3410/3460 |
| Q7551A | |
| Q7551X | HP LJ P3005/3005d/3005n/3005dn/3035mfp/3027mfp |
| C7115A/EP-25 | HP LJ 1000/1200/1200n/1220/3300/3330/3380 |

| | |
|--------------------|--|
| C7115X/EP-25 II | |
| C3906A/EP-A | HP LJ 5L/6L/6L Gold/6L Pro/3100/3150 |
| Q2613A | |
| Q2613X | HP LJ 1300/1300n |
| Q2624A | |
| Q2624X | HP LJ 1150 |
| Q2613A | |
| Q2624A | HP LJ 1300/1300n; HP LJ 1150; HP LJ 1000/1200/1200n/1220/3300/3330/3380 |
| C7115A/EP-25 | |
| Q2613X | |
| Q2624X | HP LJ 1300/1300n; HP LJ 1150; HP LJ 1000/1200/1200n/1220/3300/3330/3380 |
| C7115X/EP-25 II | |
| C4092A/EP-22 | HP LJ 1100/1100A/3200 |
| Q2610A | HP LJ 2300/2300n/2300d/2300dn/2300dtn |
| C3903A/EP-V | HP LJ 5P/6P/5MP/6MP |
| C4096A/EP-32 | HP LJ 2000/2100/2100M/2100TN/2200 |
| C4127A | HP LJ |
| C4127X/EP-52 | 4000/4000N/4000T/4000TN/4050/4050N/4050DN/4050TN |
| Q8061A | |
| Q8061X | HP LJ 4100/4100n/4100tn/4100dtn/4100mfp/4101mfp |
| Q8061X/C4127X | HP LJ 4000/4000N/4000T/4000TN/4050/4050N/4050DN/4050TN ; HP LJ 4100/4100n/4100tn/4100dtn/4100mfp/4101mfp |
| C4129X/EP-62/CRG-H | HP LJ 5000/5100/5000LE/5100LE/5000SE |
| C4182X/EP-72 | HP LJ 8100/8150/Mopier320 |
| 92274A/EP-P | HP LJ 4L/4LC/4P/4M/4MP |
| 92298A/EP-E | HP LJ 4/4+/4M/4M+/5/5M/5N |
| 92298X | HP LJ 4/4+/4M/4M+/5/5M/5N |
| Q1338A | HP LJ 4200/4200n/4200tn/4200dtn/4200l/4200ln |
| Q5942A | HP LJ 4240/4250/4250n/4350/4350n/4350l |
| Q1338X | HP LJ 4200/4200n/4200tn/4200dtn/4200L/4200Ln |
| Q1339A | HP LJ 4300/4300n/4300tn/4300dtn |

| | |
|-----------------------|---|
| Q5942X | HP LJ 4240/4250/4250n/4350/4350n/4350L |
| Q5945A | HP LJ 4345/4345MFP |
| Q7516A | HP LJ 5200/5200n/5200tn/5200dtn/5200L; Canon LBP 3500/3900 |
| Q8543X | HP LJ P9000/9040/9050 |
| CE390A | HP LJ EnterPrise M4555/4555f/4555fskm MFP; HP LJ Enterprise M601/M602n/M602dn/M602/M603/M603n/M603dn/M603xh |
| CE390X | HP LJ EnterPrise M4555/4555f/4555fskm MFP; HP LJ Enterprise M602n/M602dn/M602/M603/M603n/M603dn/M603xh |
| CC364A | HP LJ P4014/4014n/4015n/4015tn/4015x/4515n/4515tn/4515x |
| CC364X | HP LJ P4015n/4015tn/4015x/4515n/4515tn/4515x |
| | |
| Q6000A Bk/CRG-707BK | |
| Q6001A C/CRG-707C | HP Color Laserjet 1600/2600n/2605/2605dn/2605dtn; |
| Q6002A Y/CRG-707Y | CM1015/1017; Canon LBP5000/5100 |
| Q6003A M/CRG-707M | |
| CB540A/CRG-316/716 BK | |
| CB541A/CRG-316/716 C | HP Color Laserjet CP1215/1515/CP1518;CM1300mfp/1312mfp; Canon |
| CB542A/CRG-316/716 Y | LBP5050/5050n |
| CB543A/CRG-316/716 M | |
| CC530A/CRG-318/718 BK | |
| CC531A/CRG-318/718 C | HP Color Laserjet CP2020/2025/2025n/2025dn/2025x; |
| CC532A/CRG-318/718 Y | CM2320 |
| CC533A/CRG-318/718 M | |
| CE310A BK | |
| CE311A C | |
| CE312A Y | HP Laserjet Pro CP1020/1025/1025nw |
| CE313A M | |
| CE320A BK | |
| CE321A C | |
| CE322A Y | HP Laserjet Pro CP1415fn/1415fnw/CP1525nw |
| CE323A M | |
| CE410A BK XL | HP LaserJet Pro 300 Color MFP M375nw/M475dn/M475dw; |

| | |
|-----------------|---|
| CE410A BK | Pro 400 Color Printer M451nw/M471dn/M471dw; Pro 400 Color MFP M475dn/M475dw |
| CE411A C | |
| CE412A Y | |
| CE413A M | |
| Q3960A Bk | |
| Q3961A C | HP Color Laserjet 2550n/2550L/2550Ln/2820/2840; Canon LBP5200 |
| Q3962A Y | |
| Q3963A M | |
| C9700A Bk | |
| C9701A C | HP Color Laserjet 1500/1500L/2500/2500n/2500L; Canon LBP2410/EP87 |
| C9702A Y | |
| C9703A M | |
| Q3960A/9700A Bk | HP Color Laserjet 2550n/2550L/2550Ln/2820/2840; |

CANON

CanonFAX
L200/220/240/250/260i/280/290/300/350/360/380/388

Multipass L60/90/6000; ImageClass 1100;

LaserClass 300/2050/2060/3500/4000/4500/6000

| | |
|-----------------|--|
| Canon FX-6 | Canon Fax L1000; LaserClass 3170/3175 |
| Canon FX-7 | Canon Fax L2000; LaserClass 710 720 720i 730i |
| Canon FX-8 | Canon L400/L170; Imageclass D320/D340;LC 510 |
| Canon CRG-W | Canon ImageClass D323/D383/L390S/L398S/L408S |
| Canon CRG-T/TL4 | Canon PCD 320/340; Fax L400 |
| Canon S-35 | Canon ImageClass D320/D340, L170 |
| Canon FX-9 | |
| Canon FX-10 | Canon FAX-L100/120; Canon ImageClass MF4150, MF4690;Type 104 |
| Canon CRG-104 | |
| Canon EP-26 | Canon LBP-3200; LaserShot MF3110 |
| Canon EP-27 | Canon LBP-1800/1840/3200/MF3110/5630/5650/5730/5750/5770 |

| | |
|----------------------|--|
| Canon CRG-U | Canon IC MF3112/MF 5630/MF 5650 |
| Canon X-25 | Canon MF3110/MF5530/MF5550 |
| Canon CRG106/306/706 | Canon Imageclass MF6530 MF6550 |
| Canon CRG-714 | Canon Fax L3000/L3000ip |
| Canon E16/E31 | Canon FC 200/210/220/224/230/270/300/500/700; PC290/920 |
| Canon E20 | /950/980; Canon FC 120; PC 140/150/300/310/320/325/400/420/430/ 530/550; PC- |
| Canon E30 | 210/220/230/300/320/325/330/330L/420/530/ 720/730/740/745/770/775/785/790/795/920/980/98 5 |
| Canon E40 | |
| Canon CRG-308 | |
| Canon CRG-308 II | Canon LBP-3300/3360 |
| Canon CRG-315 | |
| Canon CRG-315 II | Canon LBP-3310/3370 |
| CRG-310/510/710 | |
| CRG-310/510/710 II | Canon LBP-3410/3460 |
| CRG-120/320/720 | Canon Imageclass D1120/D1150/D1170D1180/D1550; MF6680DN |

SAMSUNG

| | |
|--------------------|---|
| ML-1710/1510 | Samsung ML-1510/1710/1750;SF-560/565P/750/755P |
| ML-1520 | Samsung ML-1520 |
| SCX-4100 | Samsung SCX-4100 |
| SCX-4216 | Samsung SCX-4016/4116/4216/4216F |
| ML-1610 | Samsung ML-1610 |
| ML-2010 | Samsung ML-2010 |
| SCX-4521 | Samsung SCX-4521F |
| ML-2570 | Samsung ML-2570/2571/2510 |
| ML-1640(MLT-D108) | Samsung ML1640/1641/1642/2240/2241 |
| SCX-4300(MLT-D109) | Samsung SCX-4300/4310/4315 |
| ML2165(MLT-D101S) | Samsung ML-2160/2162/2165/2168; SCX- 3400/3405/SF-760P |
| ML-2955(MLT-D103L) | Samsung ML-2955ND/SCX-4729FD/SCX-4729FW |

| | |
|---------------------|--|
| | SAMSUNG |
| ML-1666(MLT-D104) | ML1666/1660/1661/1665/1673/1674/1678;SCX-3201/3218/3206 |
| ML-1910(MLT-D105S) | Samsung ML1910/1915/1911/2580/2581/2526/2540; SCX-4500/4600/4601/4623;SF650/651P, xerox 3140 |
| SCX-4828(MLT-D209L) | Samsung SCX-4824FN/4828FN/ML2855 xerox 3250 |
| ML-3310(MLT-D205L) | Samsung ML-3310/3312/3710/3712ND; SCX-4823/4823HD/5737/5637HR/5639/5739 |
| SCX-4200D3 | Samsung SCX-4200 |
| ML-2250D5 | Samsung ML2250/2251N/2251NP/2252W |